



TB-539: Model MA/SA58H Installation Guide

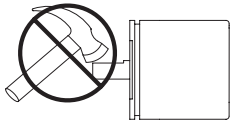

Do not shock or strike.

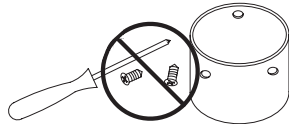

Do not disassemble.

The maximum recommended motor axial endplay is $\pm 0.030''$. Maximum motor TIR is $0.007''$.

Step 1

Slide the Model 58H encoder over the motor shaft. If needed, clean the motor shaft of any burrs using a fine crocus cloth.

DO NOT USE UNDUE FORCE.

Position the encoder so that the flex mount arms just touch the mounting surface. Install screw(s) through the holes in the flex mount and tighten onto the motor securely. (Typical torque range of 115 to 160 oz-in). For additional security, add a drop of Loctite 222 to the threads of the screws.

Step 2

Using a 2.5mm hex wrench, tighten the setscrew in the encoder's clamping collar. (Typical torque range of 50 to 80 oz-in). For additional security, add a drop of Loctite 222 to the threads of the setscrew. Do not allow Loctite to run into the bore or onto the encoder bearings.

Step 3 (2 pt. flex mount option only)


For encoders with the 2 pt. flex mount option, the home position can be adjusted by loosening the mounting screws and rotating the encoder to the desired position, then retightening the screws.

ALIGNMENT NOTE: When turning the motor shaft by hand, the rocking movement of the encoder should be minimal. If not, loosen the encoder clamping collar setscrew and rotate the encoder bore relative to the motor shaft to reposition the encoder until this movement is minimized.

When tightening the screw(s) or setscrews, avoid holding the motor shaft with anything that may scar or burr the shaft.

Removal

Loosen (do not remove) the socket head screw in the clamping collar. Then remove the flex mount screws and gently slide the encoder off the motor shaft.

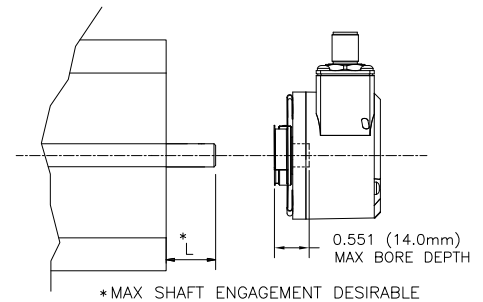

Hollow Shaft Mounting (MA/SA58H)

WIRING TABLE

For EPC-supplied mating cables, refer to wiring table provided with cable.

For CE (Conformity European) requirements, use M12 cordset with shield connected to M12 coupling nut.

SSI ENCODERS		CANopen ENCODERS	
Function	8-Pin M12	Function	5-Pin M12
Ground (GND)	1	+VDC	2
+VDC	2	Ground (GND)	3
SSI CLK+	3	CAN _{HIGH}	4
SSI CLK-	4	CAN _{LOW}	5
SSI DATA+	5	CAN _{end} / Shield*	1
SSI DATA-	6		
PRESET	7		
DIR	8		
Shield	Housing		

*M12 connector is connected to encoder housing.